

TRAKTOR PRO

- Autoloop 1
- FX Assign Buttons 2
- FX Unit 3
- Tempo Fader 4
- Manual Loop Controls 5
- Delete Button 6
Delete + Hotcue or Sample Button deletes it.
- Hotcue 1–4 (Beatjump) Buttons 7
- MODE 1: Sampler Buttons 8
- MODE 2: Hotcue 5–8 (Loop) Buttons
- Tempo Bend Buttons 9
- Keylock Button 10



- 11 Deck Switch Button
- 12 Sync (Master) Button
- 13 Scratch Mode enable/disable Button
- 14 Master Volume Control
- 15 Loop Recorder Controls
- 16 Browse Controls
- 17 Transport Controls
- 18 Equalizer Controls
- 19 Headphone Cue Button
- 20 Autocrossfade Buttons