

TRAKTOR LE

- Autoloop 1
- FX Assign Buttons 2
- FX Unit 3
- Tempo Fader 4
- Manual Loop Controls 5
- Duplicate Deck 6
- Direct Loop Set 7
- Tempo Bend Buttons 8
- Keylock Button 9



- 10 Deck Switch Button
- 11 Sync (Master) Button
- 12 Scratch Mode enable/disable Button
- 13 Master Volume Control
- 14 Browse Controls
- 15 Transport Controls
- 16 Equalizer Controls
- 17 Headphone Cue Button
- 18 Autocrossfade Buttons