

TRAKTOR PRO

- 1 Effect adjustment knob
- 2 FX ON/OFF switch button
- 3 FX ON/OFF switch button (FX ON 1/2)
- 4 Deck focus switch button (DECK CHG.)
- 5 Key lock button (KEY LOCK)
- 6 Loop In / Loop Out buttons
- 7 Auto loop and loop size adjustment buttons
- 8 Hotcue buttons
- 9 Shift button (SHIFT)
- 10 Jog wheel
Hold Shift and turn to search in list.
- 11 Fast-forward/Fast-rewind buttons



- 12 Filter cut off frequency (DECK A/C)
- 13 Filter cut off frequency (DECK B/D)
- 14 Filter function ON/OFF (DECK A/C)
- 15 Filter function ON/OFF (DECK B/D)
- 16 Load button (LOAD A/B)
Hold SHIFT to load to DECK C or DECK D.
- 17 Track selection knob
Hold SHIFT to scroll through the browser tree.
- 18 Favorites List selection buttons
- 19 Browse button
Maximizes/minimizes the browser window display