



- 1 Deck Toggle
- 2 Play / Pause
- 3 Cue
- 4 Scratch Mode
- 5 Search Mode
- 6 Auto Loop Set
- 7 Deck Select (PRO only)
- 8 Jog Wheel
- 9 Pitch Fader
- 10 Pitch Bend
- 11 Pitch Range



- 12 BPM Tap
- 13 Unload Track
- 14 Loop Size 1/2
- 15 Loop Size x2
- 16 Browser Back
- 17 Loop In
- 18 Loop Out
- 19 Reloop
- 20 Track Selection
- 21 Display

