

TRAKTOR LE

- 1 PITCHFADER
- 2 PITCH BEND button –
- 3 PITCH BEND button +
- 4 DRY/WET control
- 5 EFFECT parameter
- 6 FX ON button
- 7 EFFECT RESET and FX 1
- 8 LOOP LENGTH
- 9 AUTO-LOOP function
SHIFT: LOOP IN/SET CUE button
- 10 AUTO-LOOP function
SHIFT: LOOP OUT button
- 11 FILTER
- 12 PAN (BALANCE) control
- 13 JOG WHEEL MODE buttons
- 14 JOG WHEEL
- 15 SHIFT button
- 16 SYNC button
SHIFT: Deck Master Select
- 17 CUP button
- 18 CUE button



- 19 PLAY/PAUSE button
SHIFT: KEYLOCK
- 20 TRAX encoder
SHIFT: Folder Navigation
- 21 LOAD button
SHIFT: Preferences Folder Navigation
- 22 DECK SELECT switch
- 23 MASTER volume
- 24 BOOTH volume
- 25 HEADPHONES volume
- 26 CUE MIX fading
- 27 GAIN control
- 28 EQ control high
- 29 EQ control mid
- 30 EQ control low
- 31 MONITOR CUE button
- 32 POWER LED
- 33 MIDI SIGNAL LED
- 34 VU-METER
- 35 LINEFADER
- 36 CROSSFADER