

# **TRAKTOR PRO**



- |  |  |   |  |
|--|--|---|--|
| 1 Pitchfader<br>SHIFT: Key   | 10 Filter  | 21 Jog Wheel Mode Buttons                                 | 32 EQ Control High   |
| 2 Dry/Wet Control<br>SHIFT: Effect change in<br>Advanced Effect Mode | 11 Pan(Balance) Control                                | 22 Jog Wheel  | 33 EQ Control Mid  |
| 3 Effect parameter<br>SHIFT: Effect change in<br>Chained Effect Mode | 12 Pitch Bend Button –<br>SHIFT: FX1                   | 23 Shift Button   | 34 EQ Control Low  |
| 4 FX On Button<br>SHIFT: FX Preset 1                                 | 13 Pitch Bend Button +<br>SHIFT: FX2                   | 24 Sync Button<br>SHIFT: Deck Master Select               | 35 Monitor Cue Button<br>SHIFT: Preferences Folder<br>Navigation |
| 5 Effect Reset and FX 1<br>On respectively<br>SHIFT: FX Preset 2     | 14 Auto-loop Function<br>SHIFT: Loop In/Set Cue Button | 25 Cup Button<br>SHIFT: Beat Tab                          | 36 Linefader   |
| 6 Effect Button 1 and FX 2<br>On respectively<br>SHIFT: FX Preset 3  | 15 Reloop Function<br>SHIFT: Loop Out Button           | 26 Cue Button<br>SHIFT: FX Mode                           | 37 Master Volume   |
| 7 Effect Button 2 and FX 3<br>On respectively<br>SHIFT: FX Preset 4  | 16 Beatjump Backward<br>SHIFT: Left-Sided GRID Shift   | 27 Play/Pause Button<br>SHIFT: Keylock                    | 38 Booth Volume  |
| 8 Loop Length  | 17 Beatjump Forward<br>SHIFT: Right-Sided GRID Shift   | 28 TRAX Encoder<br>SHIFT: Folder Navigation               | 39 Headphones Volume   |
| 9 Loop Shift   | 18 Hot Cue Delete Button                               | 29 Load Button<br>SHIFT: Preferences Folder<br>Navigation | 40 Cue Mix Fading  |
|  | 19 Hot Cue Bank Select                                 | 30 Deck Select Switch                                     | 41 Power LED   |
|  | 20 Hot Cue Buttons<br>SHIFT: Sample Player 1 – 8       | 31 Gain Control   | 42 MIDI Signal LED   |
|  |  |   | 43 VU-Meter  |
|  |  |   | 44 Crossfader  |