

TRAKTOR PRO

1 Deck PAN
(Abhängig von Select Deck)

2 Deck Filter
(Abhängig von Select Deck)


3 Deck Key
(Abhängig von Select Deck)

4 Loop/HOT CUE Mode Switch
Loop Mode (Off)
Set/Trigger Hot Cue (On)
Delete Hot Cue (Talk Over)

5 EFFECT ENCODER
Advanced = Param 1-3/Activate 1-3
Chained = Effect 1-3/Select Effect
(Abhängig von EFFECT MODE BUTTON 1-3)

6 Loop Size (Loop Mode)
Hot Cue's (Cue Mode)

7 Beat Phase Monitor

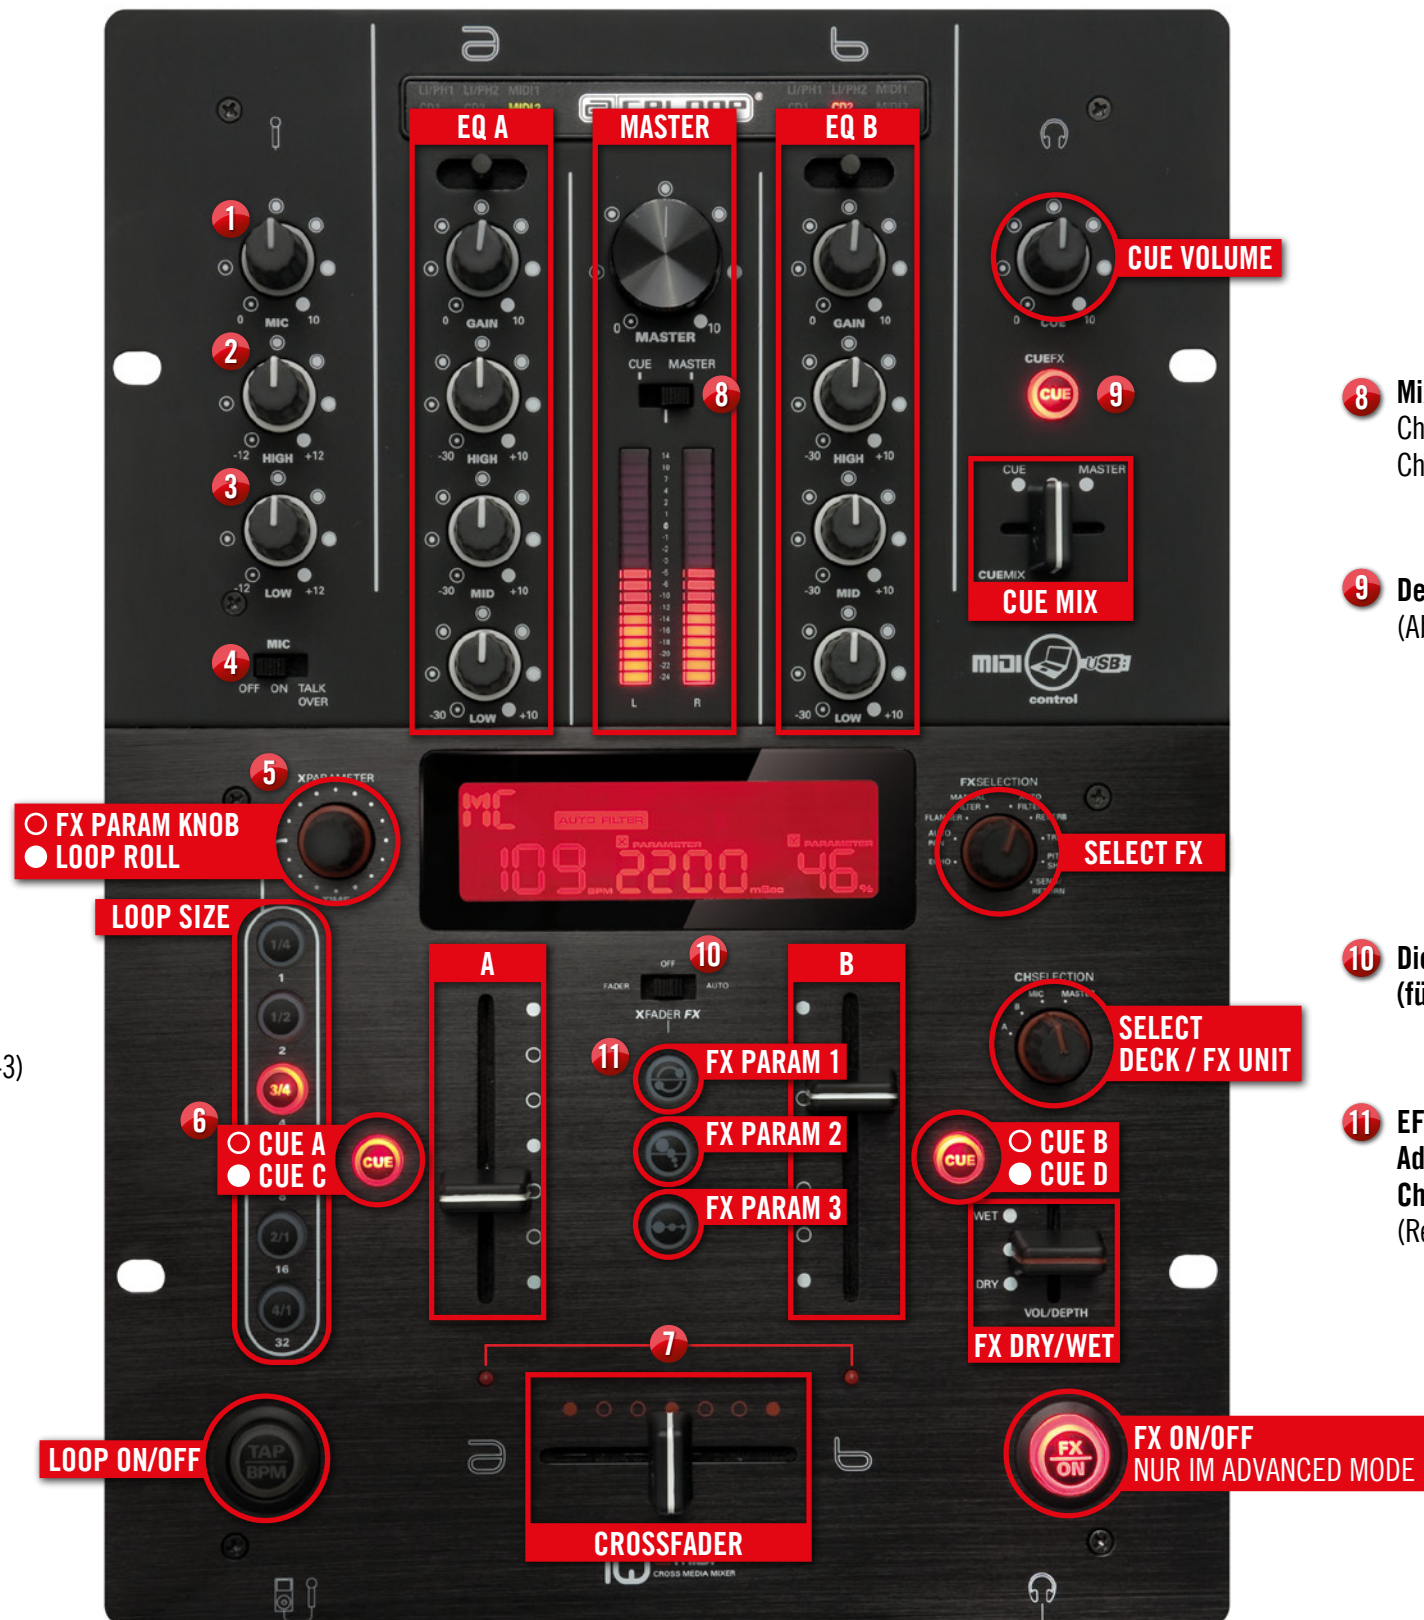

8 Mixer Channel Switch (Linefader + EQ) CUE
Channel A+B (Cue)
Channel C+D (Master)

9 Deck Sync
(Abhängig von Select Deck)

10 Dieser Switch muss IMMER AUF OFF stehen
(für TRAKTOR Control Mode)

11 EFFECT MODE BUTTON
Advanced Effect = Param 1-3
Chained Effect = Slot 1-3/FX ON
(Regulierung über EFFECT ENCODER)